



# FLOATING DISPENSER INSTALLATION GUIDE

## RECOMMENDED PLACEMENT GUIDE

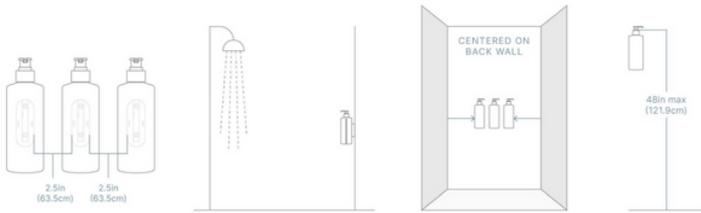

## PARTS INCLUDED IN INSTALLATION KIT

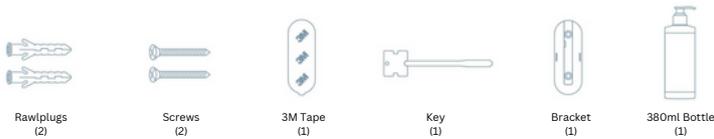

Your installation kit will differ depending on what kit you have purchased. ( Adhesive 3M Pad supplied seperately )

## ITEMS REQUIRED TO SAFELY INSTALL BRACKET SYSTEM



## HOW TO SAFELY INSTALL YOUR DISPENSER SYSTEM


1

- Clean surface thoroughly with an alcohol wipe.
- Make sure the surface is fully dry before installing the bracket.
- **Only install onto a smooth flat surface.** If the surface is not smooth the pad may not adhere to the surface.




2

- Determine the correct placement of dispenser(s).
- Tape the template provided onto the wall, making sure it is level. Recommended height is 48" from floor level. ( to the pump of the dispenser )

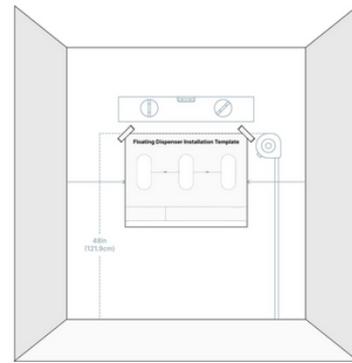


3a

- **For tape installation,** peel back film and adhere to back of the bracket.
- Peel back outer film and press bracket onto wall using template. **Please leave overnight for adhesive pad to cure before placement of dispenser.**

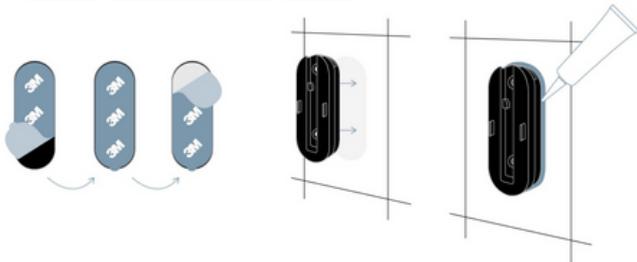


3b

- **For screw installation,** use bracket and pencil to mark holes on wall. Then drill into wall with correct sized drill bit to make holes.
- Insert the wall plugs until flush to wall.
- Use screws to fix bracket in place. Tighten with screwdriver.
- place a line of silicone around the bracket to prevent water and grime building behind bracket.

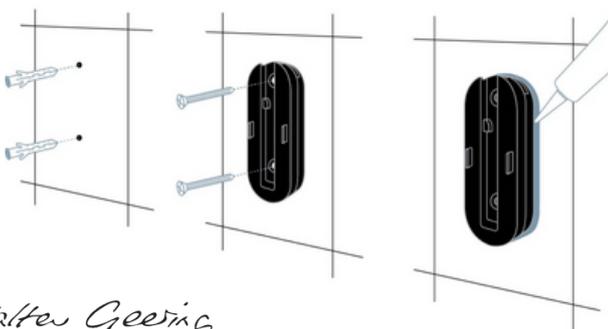

4

- Slide dispenser bottle down until it clicks into place. Your dispenser once filled is ready to use.

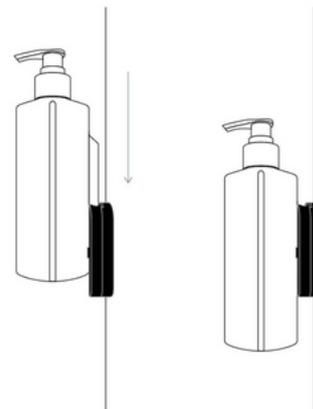

5

- To remove the bottle, insert key into the keyhole on top of bracket and push the key down to release the bottle. Slide bottle upwards to remove from bracket.

